

Article number: 50.CBS.0



Cutlery container



Product specifications

Uitwendig (LxBxH)	108 x 108 x 140 mm
Sidewalls	Fine mesh
Material	PP
Article number	50.CBS.0
Temperature range	-30°C to +80°C
Color	Grey
Bottom	Fine mesh
European Article Number	7424927558582

Features

The cutlery drainer is suitable for washing cutlery upright

Optimally usable in plate baskets with pegs, and also for the cutlery drainer set 50.CBS.4 or the cutlery basket 50.NK.120.44.16

Description

Plastic cutlery holder (108 x 108 x H 140 mm) with fine perforations to prevent cutlery from protruding through the openings. Our plastic cutlery holders are designed for washing cutlery while standing. The cutlery holder is ideally used in plate baskets with pins. The holder is clamped between the pins, preventing it from tipping over. Our cutlery baskets and cutlery holders are finely meshed, preventing the cutlery from falling through, and the open construction ensures a perfect rinsing result.

Geschikte accessoires



50.UK.100



50.P.18.14



50.NK.100

Alternatieve artikelen



50.BK.100



50.BKS.20.5